




FlexiFloor® instructions

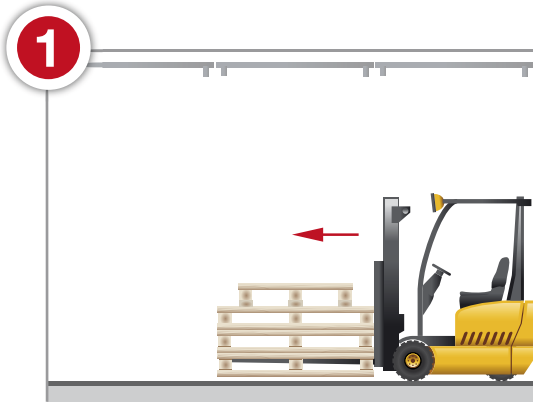


- Take 6-10 EU-pallets on the forklift.
- The top pallet lays across the others.
- The pallets should be parallel against the FlexiFloor.

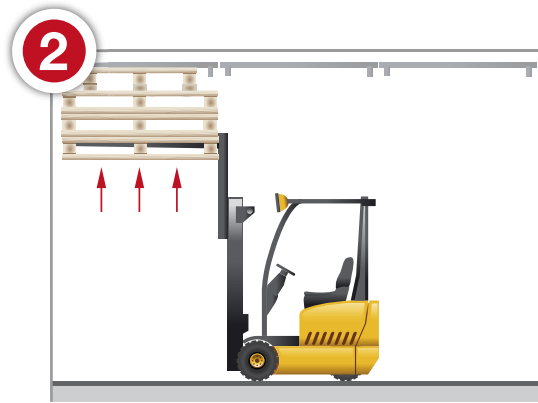


- Lift up the pallets against the FlexiFloor under the roof.
- Push the floor approx. 30-50 mm against upper limit stop.

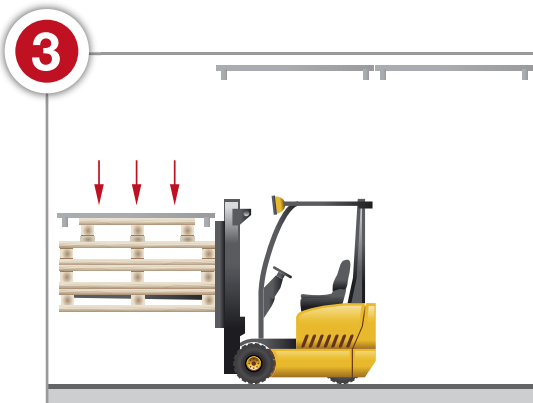


- Lower the FlexiFloor to the stop position.

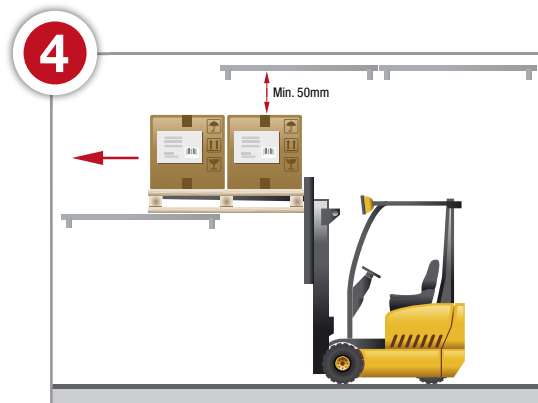

- It is recommended at least 50 mm space between cargo and upper floor.
- Place the cargo within the edge of the floor. Maximum load 1000 kg per floor.
- **NB!** One can not, under any circumstances touch a FlexiFloor parked under the roof with the goods. (see above)

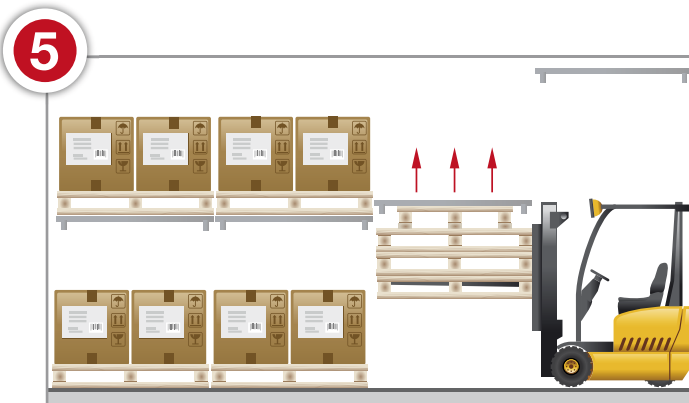

- Unloading. Same procedure as for loading, but inversely.
- When parking the FlexiFloor under the roof, make sure that the locking mechanism is closed or fixed correctly. The red arm of the locking mechanism is pointing inwards both sides. (see picture)

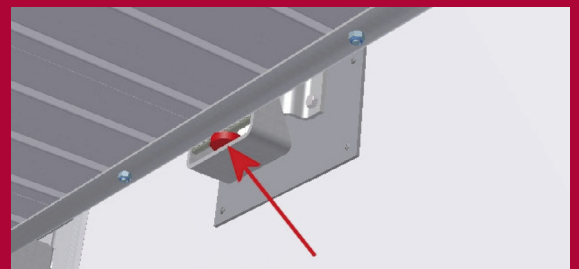

- **NB!** Make sure that all FlexiFloors are in locked position before entering cargo space. Take an extra minute to guarantee that all of the parked FlexiFloors are in the right position and to be sure by correct cargo control.
- **NOTE!** This is very important to avoid personal and cargo damage.



www.flexifloor.de

Producer: Sandströms Center AB, Luleå, Sweden